


EG-DYNAMIC

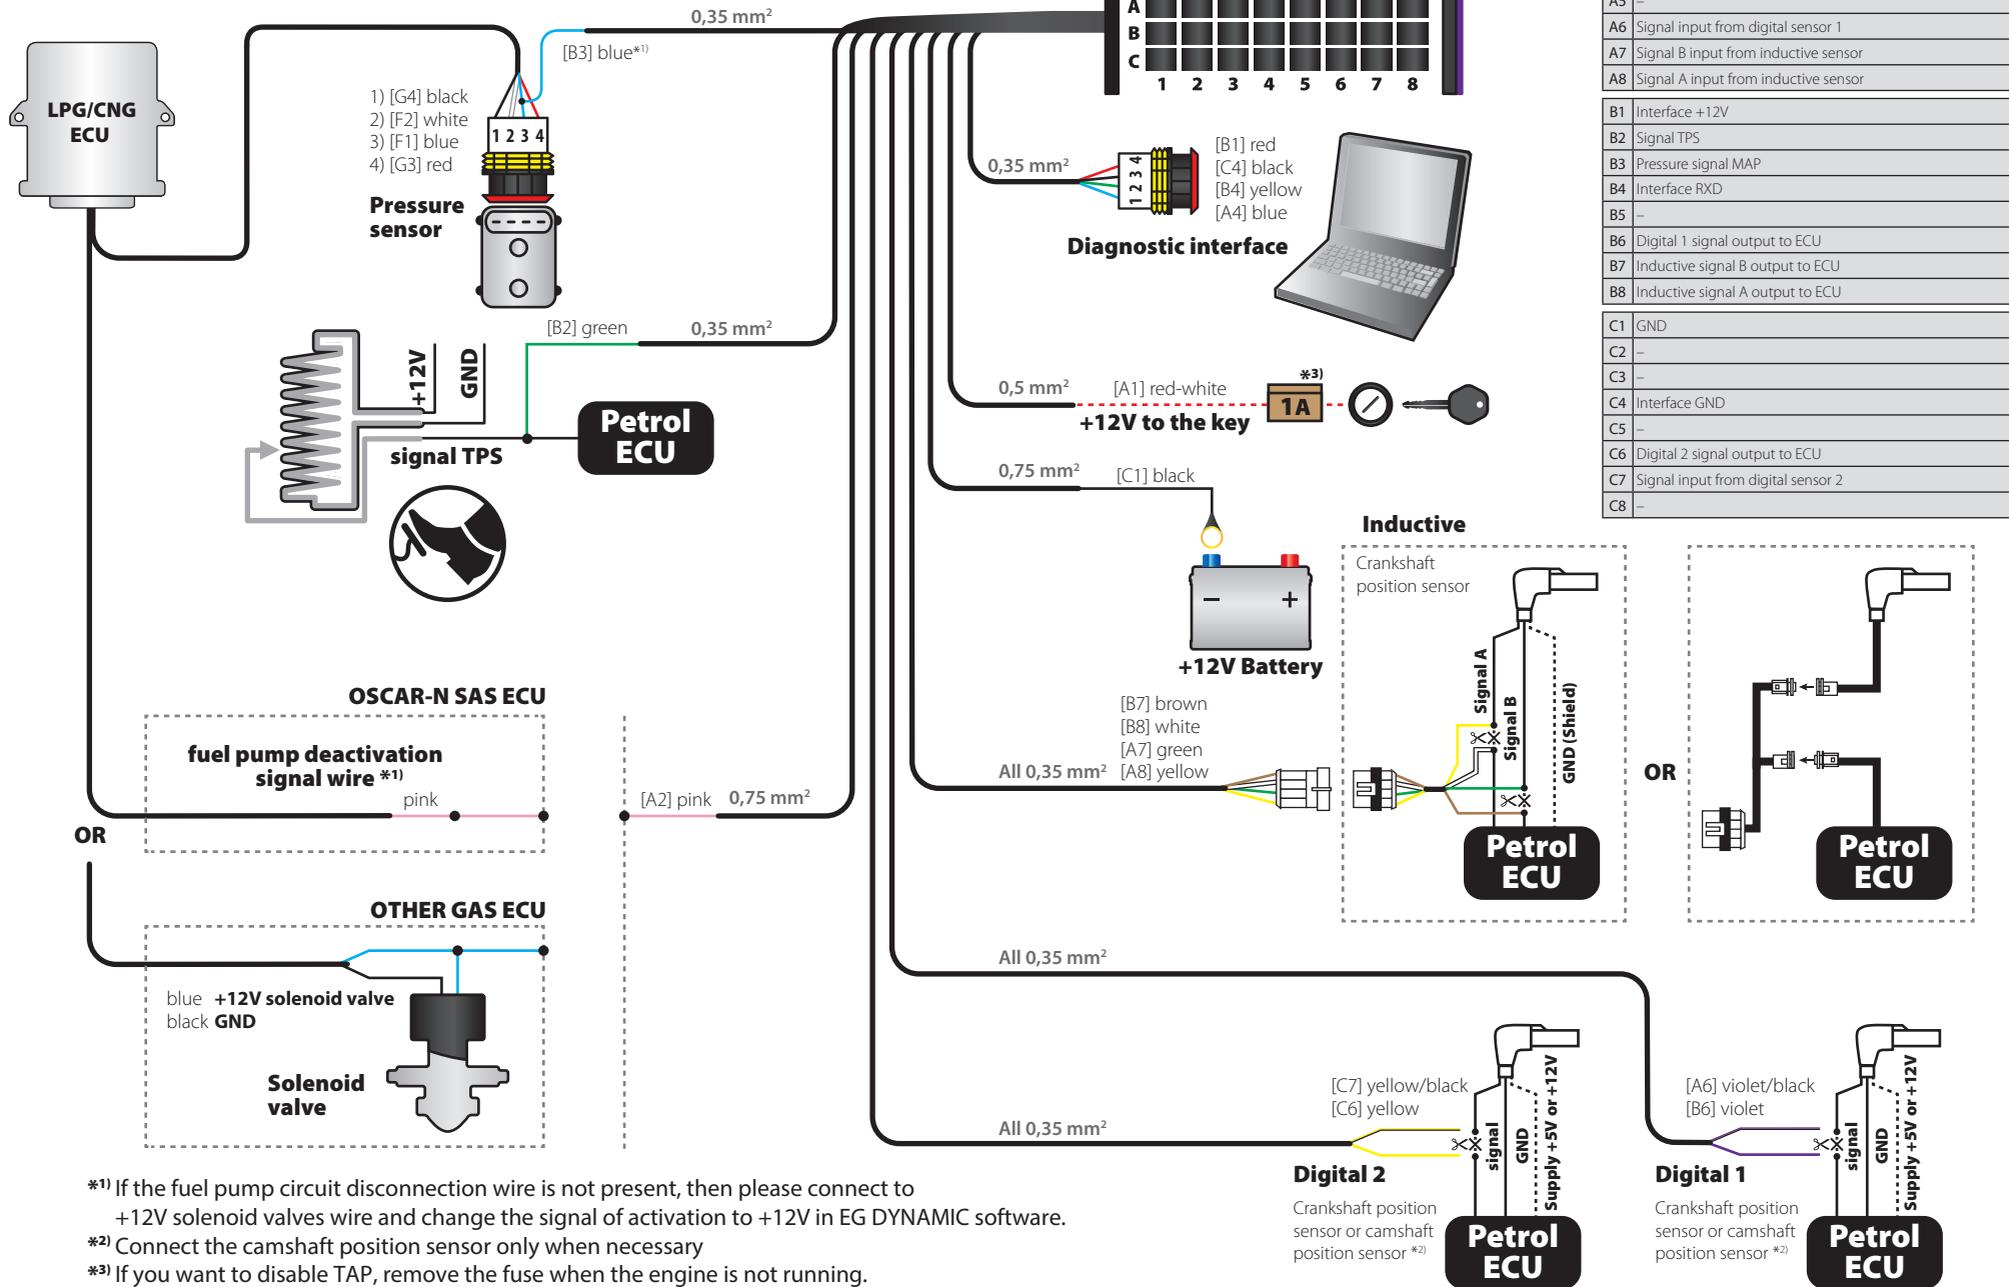

*¹⁾ If the fuel pump circuit disconnection wire is not present, then please connect to +12V solenoid valves wire and change the signal of activation to +12V in EG DYNAMIC software.

*²⁾ Connect the camshaft position sensor only when necessary

*³⁾ If you want to disable TAP, remove the fuse when the engine is not running.